

Register your product and get support at www.philips.com/welcome



EN	User manual	LV	Lietojuma rokasgrāmata
BG	Руководство по ползването	PL	Instrukcja obsługi
CS	Průvodní příručka	RO	Manual de utilizare
ET	Kasutusjuhend	RU	Руководство попользованию
FR	Consignes d'usage	SK	Průvodná uživatelská příručka
HE	הוראות שימוש	S	Uputstvo za korišćenje
IT	Manuale dell'utente	UK	Користувачів інструкція
LT	Vartotojų vadovas	SR	Полковник користица

PHILIPS

6 Slide the straightener down the length of the hair in a single motion (max. 5 seconds) from root to end, without stopping to prevent overheating.
• To create folds, slowly rotate the straightener in half-circle motion inwards (or outwards) when it reaches the hair ends and let the hair glide off the plates.

- To straighten the rest of your hair, repeat steps 4 to 6.
After use:
 - Switch off the appliance and unplug it.
 - Place it on a heat-resistant surface until it cools down.
 - Clean the appliance and straightening plates with damp cloth.
 - Lock the straightening plates.
 - Keep it in a safe and dry place. Free of dust. You can also hang it with the hanging loop (Q).

Guarantee and service

If you need more information e.g. about replacement of an attachment or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Customer Care Centre in your country (you find the phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country go to your local Philips dealer.

Troubleshooting

Problem	Cause	Solution
The power socket to which the appliance has been connected does not work at all.	Check the appliance is plugged in correctly. Check the fuse for this power socket in your home.	
The appliance will not be suitable for the voltage to which it has been connected.	Ensure that the voltage indicated on the type plate of the appliance corresponds to the local main voltage.	

Български

Поддръжката на за ползването и доборе админ при Филип? За да се възползвате напълно от продуктите на Филип, поддръжката, регистриране и изваждане от www.philips.com/welcome.

3140 035 4900
© 2015 Koninklijke Philips N.V. All rights reserved.

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

1 Important
Read this user manual carefully before you use the appliance and keep it for future reference.
• **WARNING: Do not use this appliance near water.**

- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.
- WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.**
- Always unplug the appliance after use.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.
- Pay full attention when using the appliance since it could be extremely hot. Only hold the handle or other parts are hot and avoid contact with the skin.
- Always place the appliance with the stand on a heat-resistant, stable flat surface. The hot heating plates should never touch the surface or other flammable material.

- Avoid the mains cord from coming into contact with the hot parts of the appliance.
- Keep the appliance away from flammable objects and material when it is switched on.
- Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.
- Only use the appliance on dry hair. Do not operate the appliance with wet hands.
- Keep the heating plates clean and free of dust and styling products such as mousse, spray and gel. Never use the appliance in combination with styling products.
- The heating plates have coating on this. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.
- If the appliance is used on colour-treated hair, the heating plates may be stained. Before using it on artificial hair, always consult their distributor.
- Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an unexpectedly hazardous situation for the user.
- Do not insert metal objects into openings to avoid electric shock.
- Do not pull on the power cord after using. Always unplug the appliance by holding the plug.

Electromagnetic fields (EMF)
This Philips appliance complies with applicable standards and regulations regarding exposure to electromagnetic fields.

Environment
This symbol means that this product shall not be disposed of with normal household waste (2012/19/EU). Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

2 Straighten your hair
Preparation for your hair:
• Wash your hair with shampoo and conditioner.
• Blow dry your hair with a brush.
• Apply heat protective spray to your hair and comb it thoroughly with large-toothed comb.

- Tip**
 - It is suggested to keep the heat plates locked before use.
 - Frequent users are recommended to use heat protection products when straightening.
 - Use the straightener only when your hair is dry.
- Connect the plug to a power supply socket.
- Switch the power on indicator (Q) to 1 to switch on the appliance.
- The power-on indicator (Q) lights up.
- After 60 seconds, the appliance heats up.
- Slide the sliding lock (Q) to unlock the appliance.
- Comb your hair and take a section that is not wider than 5cm for straightening.
- Note: For thicker hair, it is suggested to create no more than 5cm.
- Place the hair between the straightening plates (Q) and press the handles together.

2 Изправяне на косата

Подготовка на косата:
• Измийте косата с шампоан и балсам.
• Изсушете косата със сешоар и четка.
• Накловете стриж за защита от висока температура. Върху косата и в краищата додържте с четка с широки зъби.

- Съвет**
 - Препоръчително е да адринате пластините затворени преди употреба.
 - Ако често изправяте косата си с препоръчаното да изправяте продукти за защита от висока температура.
 - Използвайте преста за изправяне само на суха коса.

- Включете апарата в мрежата.
- Преместете люка за включване (Q) в положение 1, за да включите уреда.
 - Индикаторът за захранване (Q) светва.
 - След 60 секунди уреда се е затопил.
- Плавайте косата ви (Q) надолу, за да отпочинете уреда.
- Спринте косата си и извадете нишка, но по-малко от 5 см за изправяне.
- Зажпете нагорнатиестки (Q) надолу, за да изправите косата.
- Послесте косите на една между нагорнатите пластини (Q) и пригответе косата между изправяните пластини (Q).
- Плавайте преста за изправяне надолу по амонката на косата с едно движение (max. 5 секунди) от корените до краищата. Не дайте опрете, за да не прегорите косата.
 - За да създадете камшиета, бавно завъртете преста за изправяне в полукръг навътре (или навън), когато достигне краищата на косата и опрете косата се изважване от пластините.
- За да изправите останалата част от косата, отплетете спънки и повторете стъпки 4 до 6.

- After use:**
- Switch off the appliance and unplug it.
 - Place it on a heat-resistant surface until it cools down.
 - Clean the appliance and straightening plates with damp cloth.
 - Lock the straightening plates.
 - Keep it in a safe and dry place. Free of dust. You can also hang it with the hanging loop (Q).
- 3 Guarantee and service**

If you need more information e.g. about replacement of an attachment or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Customer Care Centre in your country (you find the phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country go to your local Philips dealer.

4 Troubleshooting
Problem Cause Solution
The power socket to which the appliance has been connected does not work at all.

The appliance will not be suitable for the voltage to which it has been connected.

Ensure that the voltage indicated on the type plate of the appliance corresponds to the local main voltage.

Български
Поддръжката на за ползването и доборе админ при Филип? За да се възползвате напълно от продуктите на Филип, поддръжката, регистриране и изваждане от www.philips.com/welcome.

3140 035 4900
© 2015 Koninklijke Philips N.V. All rights reserved.

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

1 Important
Read this user manual carefully before you use the appliance and keep it for future reference.
• **WARNING: Do not use this appliance near water.**

- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.
- WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.**
- Always unplug the appliance after use.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.
- Pay full attention when using the appliance since it could be extremely hot. Only hold the handle or other parts are hot and avoid contact with the skin.
- Always place the appliance with the stand on a heat-resistant, stable flat surface. The hot heating plates should never touch the surface or other flammable material.

- Avoid the mains cord from coming into contact with the hot parts of the appliance.
- Keep the appliance away from flammable objects and material when it is switched on.
- Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.
- Only use the appliance on dry hair. Do not operate the appliance with wet hands.
- Keep the heating plates clean and free of dust and styling products such as mousse, spray and gel. Never use the appliance in combination with styling products.
- The heating plates have coating on this. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.
- If the appliance is used on colour-treated hair, the heating plates may be stained. Before using it on artificial hair, always consult their distributor.
- Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an unexpectedly hazardous situation for the user.
- Do not insert metal objects into openings to avoid electric shock.
- Do not pull on the power cord after using. Always unplug the appliance by holding the plug.

- Tip**
 - It is suggested to keep the heat plates locked before use.
 - Frequent users are recommended to use heat protection products when straightening.
 - Use the straightener only when your hair is dry.
- Connect the plug to a power supply socket.
- Switch the power on indicator (Q) to 1 to switch on the appliance.
- The power-on indicator (Q) lights up.
- After 60 seconds, the appliance heats up.
- Slide the sliding lock (Q) to unlock the appliance.
- Comb your hair and take a section that is not wider than 5cm for straightening.
- Note: For thicker hair, it is suggested to create no more than 5cm.
- Place the hair between the straightening plates (Q) and press the handles together.

- Съвет**
 - Препоръчително е да плете пластините затворени преди употреба.
 - Очесто коге изправяте косата си с препоръчаните да изправяте продукти за защита от висока температура.
 - Използвайте преста за изправяне само на суха коса.

- Включете апарата в мрежата.
- Преместете люка за включване (Q) в положение 1, за да включите уреда.
 - Индикаторът за захранване (Q) светва.
 - След 60 секунди уреда се е затопил.
- Плавайте косата ви (Q) надолу, за да отпочинете уреда.
- Спринте косата си и извадете нишка, но по-малко от 5 см за изправяне.
- Зажпете нагорнатиестки (Q) надолу, за да изправите косата.
- Послесте косите на една между нагорнатите пластини (Q) и пригответе косата между изправяните пластини (Q).
- Плавайте преста за изправяне надолу по амонката на косата с едно движение (max. 5 секунди) от корените до краищата. Не дайте опрете, за да не прегорите косата.
 - За да създадете камшиета, бавно завъртете преста за изправяне в полукръг навътре (или навън), когато достигне краищата на косата и опрете косата се изважване от пластините.
- За да изправите останалата част от косата, отплетете спънки и повторете стъпки 4 до 6.

After use:

- Switch off the appliance and unplug it.
- Place it on a heat-resistant surface until it cools down.
- Clean the appliance and straightening plates with damp cloth.
- Lock the straightening plates.
- Keep it in a safe and dry place. Free of dust. You can also hang it with the hanging loop (Q).

3 Guarantee and service

If you need more information e.g. about replacement of an attachment or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Customer Care Centre in your country (you find the phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country go to your local Philips dealer.

4 Troubleshooting
Problem Cause Solution
The power socket to which the appliance has been connected does not work at all.

The appliance will not be suitable for the voltage to which it has been connected.

Ensure that the voltage indicated on the type plate of the appliance corresponds to the local main voltage.

Български
Поддръжката на за ползването и доборе админ при Филип? За да се възползвате напълно от продуктите на Филип, поддръжката, регистриране и изваждане от www.philips.com/welcome.

3140 035 4900
© 2015 Koninklijke Philips N.V. All rights reserved.

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

1 Important
Read this user manual carefully before you use the appliance and keep it for future reference.
• **WARNING: Do not use this appliance near water.**

- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.
- WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.**
- Always unplug the appliance after use.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.
- Pay full attention when using the appliance since it could be extremely hot. Only hold the handle or other parts are hot and avoid contact with the skin.
- Always place the appliance with the stand on a heat-resistant, stable flat surface. The hot heating plates should never touch the surface or other flammable material.

- Avoid the mains cord from coming into contact with the hot parts of the appliance.
- Keep the appliance away from flammable objects and material when it is switched on.
- Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.
- Only use the appliance on dry hair. Do not operate the appliance with wet hands.
- Keep the heating plates clean and free of dust and styling products such as mousse, spray and gel. Never use the appliance in combination with styling products.
- The heating plates have coating on this. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.
- If the appliance is used on colour-treated hair, the heating plates may be stained. Before using it on artificial hair, always consult their distributor.
- Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an unexpectedly hazardous situation for the user.
- Do not insert metal objects into openings to avoid electric shock.
- Do not pull on the power cord after using. Always unplug the appliance by holding the plug.

PHILIPS
Поддръжката на за ползването и доборуемте админ при Филип? За да се възползвате напълно от продуктите на Филип, поддръжката, регистриране и изваждане от www.philips.com/welcome.

3140 035 4900
© 2015 Koninklijke Philips N.V. All rights reserved.

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

1 Important
Read this user manual carefully before you use the appliance and keep it for future reference.
• **WARNING: Do not use this appliance near water.**

- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.
- WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.**
- Always unplug the appliance after use.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.
- Pay full attention when using the appliance since it could be extremely hot. Only hold the handle or other parts are hot and avoid contact with the skin.
- Always place the appliance with the stand on a heat-resistant, stable flat surface. The hot heating plates should never touch the surface or other flammable material.

- Avoid the mains cord from coming into contact with the hot parts of the appliance.
- Keep the appliance away from flammable objects and material when it is switched on.
- Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.
- Only use the appliance on dry hair. Do not operate the appliance with wet hands.
- Keep the heating plates clean and free of dust and styling products such as mousse, spray and gel. Never use the appliance in combination with styling products.
- The heating plates have coating on this. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.
- If the appliance is used on colour-treated hair, the heating plates may be stained. Before using it on artificial hair, always consult their distributor.
- Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an unexpectedly hazardous situation for the user.
- Do not insert metal objects into openings to avoid electric shock.
- Do not pull on the power cord after using. Always unplug the appliance by holding the plug.

Electromagnetic fields (EMF)
This Philips appliance complies with applicable standards and regulations regarding exposure to electromagnetic fields.

Environment
This symbol means that this product shall not be disposed of with normal household waste (2012/19/EU). Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

2 Straighten your hair
Preparation for your hair:
• Wash your hair with shampoo and conditioner.
• Blow dry your hair with a brush.
• Apply heat protective spray to your hair and comb it thoroughly with large-toothed comb.

- Tip**
 - It is suggested to keep the heat plates locked before use.
 - Frequent users are recommended to use heat protection products when straightening.
 - Use the straightener only when your hair is dry.
- Connect the plug to a power supply socket.
- Switch the power on indicator (Q) to 1 to switch on the appliance.
- The power-on indicator (Q) lights up.
- After 60 seconds, the appliance heats up.
- Slide the sliding lock (Q) to unlock the appliance.
- Comb your hair and take a section that is not wider than 5cm for straightening.
- Note: For thicker hair, it is suggested to create no more than 5cm.
- Place the hair between the straightening plates (Q) and press the handles together.

3 Guarantee and service

If you need more information e.g. about replacement of an attachment or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Customer Care Centre in your country (you find the phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country go to your local Philips dealer.

4 Troubleshooting
Problem Cause Solution
The power socket to which the appliance has been connected does not work at all.

The appliance will not be suitable for the voltage to which it has been connected.

Ensure that the voltage indicated on the type plate of the appliance corresponds to the local main voltage.

Български
Поддръжката на за ползването и доборе админ при Филип? За да се възползвате напълно от продуктите на Филип, поддръжката, регистриране и изваждане от www.philips.com/welcome.

3140 035 4900
© 2015 Koninklijke Philips N.V. All rights reserved.

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

1 Important
Read this user manual carefully before you use the appliance and keep it for future reference.
• **WARNING: Do not use this appliance near water.**

- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.
- WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.**
- Always unplug the appliance after use.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.
- Pay full attention when using the appliance since it could be extremely hot. Only hold the handle or other parts are hot and avoid contact with the skin.
- Always place the appliance with the stand on a heat-resistant, stable flat surface. The hot heating plates should never touch the surface or other flammable material.

- Avoid the mains cord from coming into contact with the hot parts of the appliance.
- Keep the appliance away from flammable objects and material when it is switched on.
- Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.
- Only use the appliance on dry hair. Do not operate the appliance with wet hands.
- Keep the heating plates clean and free of dust and styling products such as mousse, spray and gel. Never use the appliance in combination with styling products.
- The heating plates have coating on this. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.
- If the appliance is used on colour-treated hair, the heating plates may be stained. Before using it on artificial hair, always consult their distributor.
- Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an unexpectedly hazardous situation for the user.
- Do not insert metal objects into openings to avoid electric shock.
- Do not pull on the power cord after using. Always unplug the appliance by holding the plug.

Electromagnetic fields (EMF)
This Philips appliance complies with applicable standards and regulations regarding exposure to electromagnetic fields.

Environment
This symbol means that this product shall not be disposed of with normal household waste (2012/19/EU). Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

2 Straighten your hair
Preparation for your hair:
• Wash your hair with shampoo and conditioner.
• Blow dry your hair with a brush.
• Apply heat protective spray to your hair and comb it thoroughly with large-toothed comb.

- Tip**
 - It is suggested to keep the heat plates locked before use.
 - Frequent users are recommended to use heat protection products when straightening.
 - Use the straightener only when your hair is dry.
- Connect the plug to a power supply socket.
- Switch the power on indicator (Q) to 1 to switch on the appliance.
- The power-on indicator (Q) lights up.
- After 60 seconds, the appliance heats up.
- Slide the sliding lock (Q) to unlock the appliance.
- Comb your hair and take a section that is not wider than 5cm for straightening.
- Note: For thicker hair, it is suggested to create no more than 5cm.
- Place the hair between the straightening plates (Q) and press the handles together.

3 Guarantee and service

If you need more information e.g. about replacement of an attachment or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Customer Care Centre in your country (you find the phone number in the worldwide guarantee leaflet). If there is no Consumer Care Centre in your country go to your local Philips dealer.

4 Troubleshooting
Problem Cause Solution
The power socket to which the appliance has been connected does not work at all.

The appliance will not be suitable for the voltage to which it has been connected.

Ensure that the voltage indicated on the type plate of the appliance corresponds to the local main voltage.

Български
Поддръжката на за ползването и доборе админ при Филип? За да се възползвате напълно от продуктите на Филип, поддръжката, регистриране и изваждане от www.philips.com/welcome.

3140 035 4900
© 2015 Koninklijke Philips N.V. All rights reserved.

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

1 Important
Read this user manual carefully before you use the appliance and keep it for future reference.
• **WARNING: Do not use this appliance near water.**

- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.
- WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.**
- Always unplug the appliance after use.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.
- Do not use the appliance for any other purpose than described in this manual.
- When the appliance is connected to the power, never leave it unattended.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not wind the mains cord round the appliance.
- Wait until the appliance has cooled down before you store it.
- Pay full attention when using the appliance since it could be extremely hot. Only hold the handle or other parts are hot and avoid contact with the skin.
- Always place the appliance with the stand on a heat-resistant, stable flat surface. The hot heating plates should never touch the surface or other flammable material.

- Avoid the mains cord from coming into contact with the hot parts of the appliance.
- Keep the appliance away from flammable objects and material when it is switched on.
- Never cover the appliance with anything (e.g. a towel or clothing) when it is hot.
- Only use the appliance on dry hair. Do not operate the appliance with wet hands.
- Keep the heating plates clean and free of dust and styling products such as mousse, spray and gel. Never use the appliance in combination with styling products.
- The heating plates have coating on this. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.
- If the appliance is used on colour-treated hair, the heating plates may be stained. Before using it on artificial hair, always consult their distributor.
- Always return the appliance to a service centre authorized by Philips for examination or repair. Repair by unqualified people could result in an unexpectedly hazardous situation for the user.
- Do not insert metal objects into openings to avoid electric shock.
- Do not pull on the power cord after using. Always unplug the appliance by holding the plug.

Electromagnetic fields (EMF)
This Philips appliance complies with applicable standards and regulations regarding exposure to electromagnetic fields.

Environment
This symbol means that this product shall not be disposed of with normal household waste (2012/19/EU). Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

Инструкция по эксплуатации Philips HP8321 для ознакомления на сайте <http://www.panatex.com.ua>. Для Вас инструкции по эксплуатации, руководства пользователя, рецепты, рецепты для мультиварок, книги, журналы, возможность скачать бесплатно.